

# Model 2823

1310 nm/1550 nm Wavelength-division Multiplexer (WDM)

IOM2823  
Revision 6.1, July 2004



## Instructions for Installation and Use

*Read this manual before installing or using this product.*

*Observe all safety warnings and cautions.*

Copyright © 2004 by Force, Incorporated. All rights reserved. Force, Incorporated reserves the right to make changes to the product described in this document in the interest of document improvement.






# Preface

## WARNING

**The optical emissions from the optical connectors and the optical fiber are laser-based and may present eye hazards. Follow all safety precautions.**

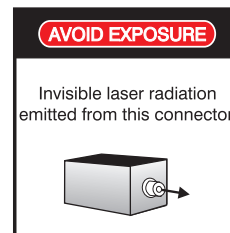

## About this Manual

This manual explains how to configure and install the Model 2823 Wavelength-division Multiplexer. It is intended for engineers and technicians who will install the Model 2823 units. While this guide provides basic information on how to configure and install the units, it assumes that you as the user are familiar with:

- the installation and manipulation of electronic and fiber optic transport equipment
- the installation and manipulation of wavelength-division multiplexers

This manual is divided into the following sections:

- Section 1, page 1: Describes the Model 2823, lists technical specifications, performance graphs, system applications, and ordering information.
- Section 2, page 5: Describes the installation of the Model 2823 and its connections to companion optical transport equipment.
- Section 3, page 9: Describes the operation of the Model 2823, troubleshooting, and user maintenance.

A quick-reference index completes the user manual.



## Related Documentation

- IOM2981: User manual for Model 2981 3RU Rack Chassis with Rack Adapter Card
- AN125: Accessories for Force, Inc. Products
- *Fiber Optic Reference Guide, 3rd Edition*. by David R. Goff (Focal Press 2002): General theory and operation of fiber optic units.
- Web Site: Our web site, <http://www.forceinc.com> may be used to download the latest versions of this manual.

## Technical Support

If you encounter any kind of problem after reading this manual, contact your local distributor or a Force, Inc. Applications Engineer. To reach technical support:

On the Web:	<a href="http://www.forceinc.com">http://www.forceinc.com</a>
By Phone (Monday through Friday 8:00 am to 5:00 pm EST):	USA (800) 732-5252 TEL (540) 382-0462
By Fax:	(540) 381-0392
By Email:	<a href="mailto:sales@forceinc.com">sales@forceinc.com</a>

## Warranty

Force, Incorporated standard products are warranted to be free from defects in materials and workmanship, meeting or exceeding factory specified performance standards for a period of three (3) years from date of purchase.

## Force Obligations

Force will, at its discretion and expense, repair any defect in materials or workmanship or replace the product with a new product. Force will, upon receipt of the return, evaluate the product and communicate to the customer the nature of the problem, and determine if the claim falls under warranty coverage.

If during the warranty period, Force is unable to repair the product to the original warranted state within a reasonable time, or if subcomponents of the unit have been obsoleted or discontinued, then Force has the option to provide an equivalent unit.

## Exclusions

This warranty does not extend to any product that has been damaged due to acts of God, accident, misuse, abuse, neglect, improper system design or application, improper installation, improper operation or maintenance, or connection to an improper voltage supply.

The Force warranty does not cover fuses, batteries, and lamps. Modifications or alterations of Force products (including but not limited to installation of non-Force equipment or computer programs), except as authorized by Force, will void this warranty. Removal or breaking of the seals on the product will also void the warranty. In addition, cost of repair by unauthorized persons within the warranty



period of the product will not be covered by Force, Incorporated. Such repairs will void the warranty.

Force, Incorporated makes no other representation or warranty of any other kind, express or implied, with respect to the goods, whether as to merchantability, fitness for a particular purpose, or any other matter. Force, Incorporated's liability shall not include liability for any special, indirect or consequential damages, or for any damages arising from or attributable to loss of use, loss of data, loss of goodwill, or loss of anticipated or actual revenue or profit, or failure to realize expected savings, even if Force, Incorporated has been advised of the possibility of such damages. This warranty constitutes Force, Incorporated's entire liability and the customer's sole remedy for defects in material and workmanship.



# Contents

**Preface..... ii**

**Section 1 Product Technical Bulletin..... 1**

    1.1 Product Overview ..... 1

    1.2 Optical Specifications ..... 1

    1.3 Environmental and Physical Characteristics ..... 1

    1.4 Specification Notes ..... 2

    1.5 Applications ..... 2

        Figure 1.1 Bidirectional Transmission Over One Fiber via the WDM ..... 2

        Figure 1.2 Unidirectional Transmission of Two Signals Over One Fiber via the WDM .... 2

    1.6 Part Numbers..... 3

**Section 2 Installation Instructions..... 5**

    2.1 General Installation Requirements ..... 5

    2.2 Items Provided ..... 5

    2.3 Items Required ..... 5

    2.4 Inspection ..... 5

    2.5 Stand-alone Module Installation ..... 6

    2.6 3RU Rack-mounting Instructions..... 6

        2.6.1 Items Provided with the 2981 3RU Rack Adapter Card ..... 6

        2.6.2 Mounting Modules on the 3RU Rack Adapter Card ..... 6

    2.7 Connections..... 6

    2.8 Unit Outline Drawing ..... 7

        Figure 2.1 Model 2823 Wavelength-division Multiplexer ..... 7

    2.9 Safety Precautions ..... 7

        2.9.1 Laser Safety Procedures ..... 7

    2.10 Shipping and Handling Precautions ..... 8

    2.11 Storing the Unit ..... 8



- Section 3 Operating Instructions ..... 9**
  - 3.1 Connections and Power-up .....9
  - 3.2 Performance Verification .....9
  - 3.3 Repair Service .....9
  - 3.4 Cleaning .....9
    - 3.4.1 Optical Connector Cleaning Equipment ..... 10
    - 3.4.2 Directions for Optical Connector Cleaning ..... 10
    - 3.4.3 Connector Handling ..... 10
  - 3.5 Troubleshooting.....11
- Index ..... 13**



# Section 1 Product Technical Bulletin

## 1.1 Product Overview

The Force, Incorporated **Model 2823 Wavelength-division Multiplexer** allows a single fiber to be used to simultaneously transmit two optical signals of different wavelengths (colors). The WDM at the transmit end combines a 1310 nm signal and a 1550 nm signal for output onto a single fiber. The WDM at the receive end separates the two signals onto two output fibers with minimal crosstalk and low loss. There are two basic models; the Model 2823WC, which offers high levels of optical isolation and the Model 2823WD, which offers ultra high levels of optical isolation.

The WDM allows the user to configure most standard single-mode Force, Incorporated fiber optic data links or video links for bidirectional transmission on one fiber or allows two signals to be sent in the same direction on one fiber.

## 1.2 Optical Specifications: @25°C, Single-mode Fiber

	Min.	Typ.	Max.	Units	Notes See Section 1.4
Optical Insertion Loss per End (2823WC)		0.75	1.0	dB	1
Optical Insertion Loss per End (2823WD)		1.1	1.3	dB	1
Temp. Dependence of Insertion Loss		±0.2		dB	
Isolation Crosstalk (2823WC)	30			dB	2
Isolation Crosstalk (2823WD)	45			dB	2
Directivity	55			dB	
Polarization Dependency		0.1		dB	
Operating Wavelength	1290	1310	1330	nm	
Operating Wavelength	1530	1550	1570	nm	

## 1.3 Environmental and Physical Characteristics

	Min.	Typ.	Max.	Units	Notes See Section 1.4
Operating Temperature Range	-40		+75	°C	
Storage Temperature Range	-40		+85	°C	
Humidity	5		95	%	
Weight		8.3		oz.	
		235		g	
Physical Dimensions	5.75 x 3.16 x 0.78			in.	
	146.1 x 80.2 x 19.8			mm	

1.4 Specification Notes

- 1) Losses exclude connector loss.
- 2) If either the 1310 nm or 1550 nm wavelength is within  $\pm 10$  nm (i.e., 1300 nm to 1320 nm or 1540 nm to 1560 nm), the isolation crosstalk is 10 dB better than the specification published above.
- 3) Humidity is RH non-condensing.
- 4) Subtract the insertion loss of the WDM (both ends) from the fiber optic link margin when designing the system.

1.5 Applications

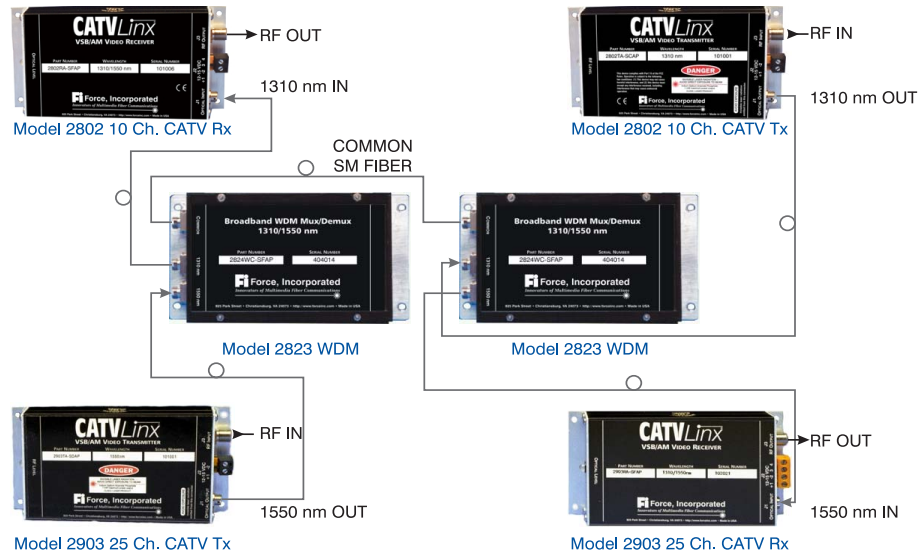


Figure 1.1 Bidirectional Transmission Over One Fiber via the WDM


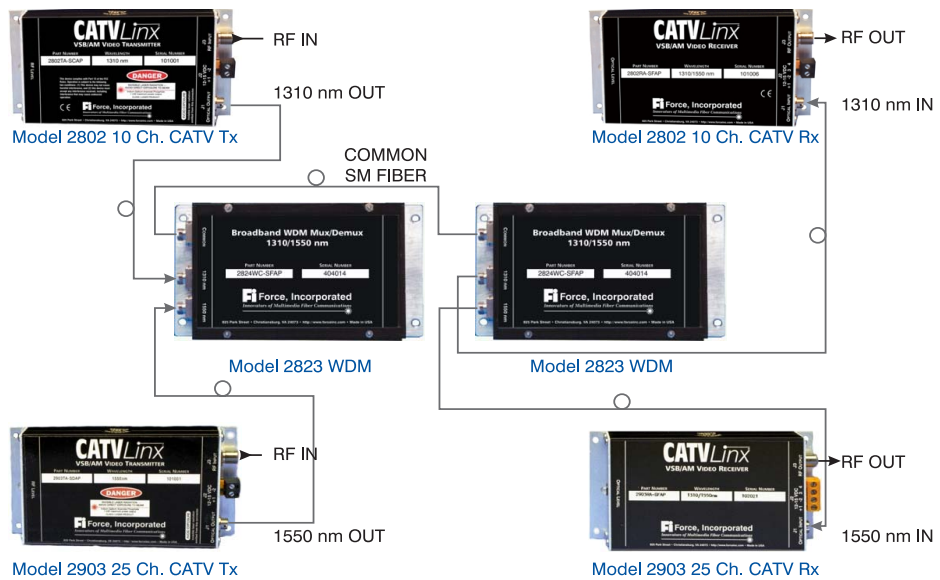


Figure 1.2 Unidirectional Transmission of Two Signals Over One Fiber via the WDM



## 1.6 Part Numbers

Part Number	Description
2823WC-SFSC	Wavelength-division Mux/Demux, High Isolation, Single-mode, 1310/1550 nm, SC/PC Connector
2823WD-SFSC	Wavelength-division Mux/Demux, Ultra High Isolation, Single-mode, 1310/1550 nm, SC/PC Connector
2823WC-SFSP	Wavelength-division Mux, High Isolation, Single-mode, 1310/1550 nm, SC/APC Connector
2823WD-SFSP	Wavelength-division Mux/Demux, Ultra High Isolation, Single-mode, 1310/1550 nm, SC/APC Connector
2823WC-SFFC	Wavelength-division Mux/Demux, High Isolation, Single-mode, 1310/1550 nm, FC/PC Connector
2823WD-SFFC	Wavelength-division Mux/Demux, Ultra High Isolation, Single-mode, 1310/1550 nm, FC/PC Connector
2823WC-SFAP	Wavelength-division Mux/Demux, High Isolation, Single-mode, 1310/1550 nm, FC/APC Connector
2823WD-SFAP	Wavelength-division Mux/Demux, Ultra High Isolation, Single-mode, 1310/1550 nm, FC/APC Connector
2823WC-SFST	Wavelength-division Mux/Demux, High Isolation, Single-mode, 1310/1550 nm, ST <sup>TM</sup> Connector
2823WD-SFST	Wavelength-division Mux/Demux, Ultra High Isolation, Single-mode, 1310/1550 nm, ST <sup>TM</sup> Connector



**Notes:**



# Section 2 Installation Instructions

## 2.1 General Installation Requirements

The installation of these units is very simple. There are no special unpacking instructions, except that care should be taken to handle units gently. The unit requires no assembly and only threshold adjustments are needed. Follow the instructions below to properly install the units.

## 2.2 Items Provided

The following is a list of items provided with each Model 2823 Wavelength-division Multiplexer:

Qty.	Mfr.	P/N	Description
AR	Force, Inc.	2823WX-SFXX	Wavelength-division Multiplexer
3 per unit	Any	Any	Active Device Receptacle Cap

## 2.3 Items Required

Qty.	Mfr.	P/N	Description
4 per unit	Any	Any	6-32 Diameter Panhead Mounting Screws with Lock Washers and Nuts
1	Any	Any	Straight Screwdriver
AR	Any	Any	9/125 $\mu\text{m}$ Single-mode Fiber
AR	Any	Any	Video, Audio, or Data Link to be Multiplexed*

\* Always refer to the specific product literature or for details on the installation, operation, and maintenance.

## 2.4 Inspection

Remove the unit from its shipping container. Any in-shipment damage that may have occurred should be visually apparent. Look for bent or damaged connectors or mounting brackets. Claims for damage incurred in shipment should be made directly to the transportation company in accordance with their instructions. Save the shipping cartons until installation and performance verification are completed.

## 2.5 Stand-alone Module Installation

The Model 2823 module may be mounted in any orientation on most flat, dry surfaces. Secure panhead screws through mounting holes provided at the base of the module.

## 2.6 3RU Rack-mounting Instructions

One Model 2823 module may be rack mounted using the Force, Incorporated Model 2981 rack adapter card. This allows the units to be installed in the Model 2981 3RU EIA 19" Basic Powered Rack Chassis for use in a standard EIA 19" wide rack. The 2981 rack adapter card holds one unit, and the chassis accommodates ten cards, allowing up to ten modules to be used in a single 3RU rack chassis.

### 2.6.1 Items Provided with the 2981 3RU Rack Adapter Card

The following is a list of items provided with each 2981A-NN-1 rack adapter card.

Description	Part Number	Qty. 2981A-NN-1
3RU Rack Adapter Card	2981.312	1
Phillips Flathead Screw, 4-40 x 3/8"	MS51959-15	4
Washer, #4 Lock, Internal Tooth	MS35333-70	4
Nut, 4-40	MS35649-242	4
PCB Mount Cable Ties	025-0250	3

### 2.6.2 Mounting Modules on the 3RU Rack Adapter Card


- 1) Locate the supplied rack adapter card parts for the model purchased as indicated above.
- 2) The optical connectors should be facing toward the front of the card (toward the locking tab.)
- 3) With the cable ties provided, secure the fiber cable along the bottom edge of the module.
- 4) The rack adapter card is now ready to install in the rack chassis. (See IOM2981 for complete details on using the 2981 chassis.)

## 2.7 Connections

Connector Type*	Connector Function
ST <sup>TM</sup> , SC/PC, SC/APC, FC/PC, or FC/APC	Common Fiber Leg
ST <sup>TM</sup> , SC/PC, SC/APC, FC/PC, or FC/APC	1310 nm Input/Output
ST <sup>TM</sup> , SC/PC, SC/APC, FC/PC, or FC/APC	1550 nm Input/Output

\*The connector type must be specified at the time the order is placed.

## 2.8 Unit Outline Drawing

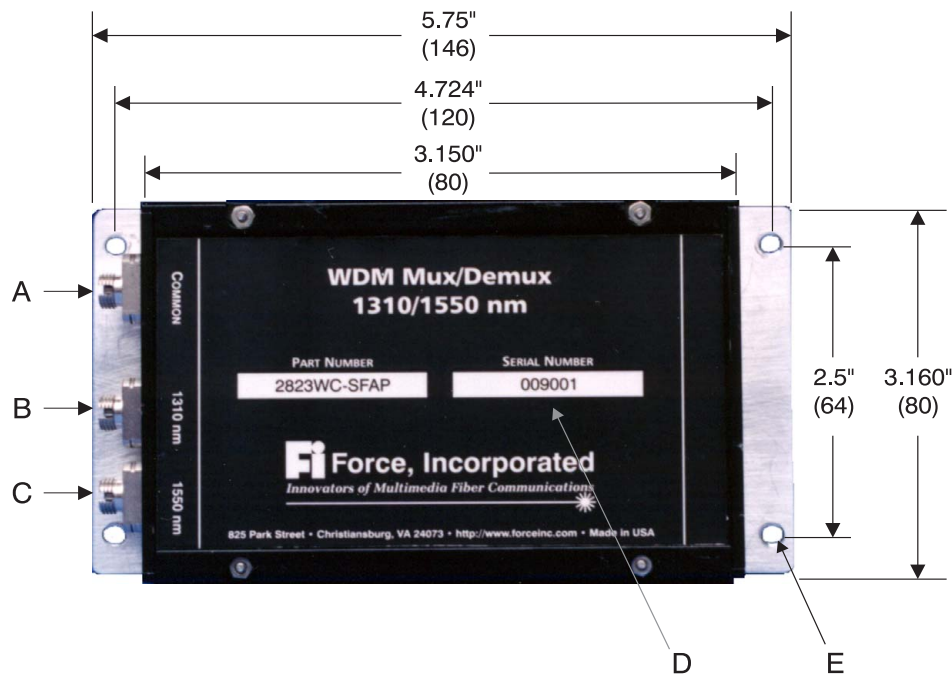

- |   |   |
|---|---|
| <p>A. Common (FC/APC Connector): Optical connection between WDMs.</p> <p>B. 1310 nm (FC/APC Connector): Bidirectional, 1310 nm wavelength input/output connector.</p> <p>C. 1550 nm (FC/APC Connector): Bidirectional, 1550 nm wavelength input/output connector.</p> | <p>D. Product Serial Number: The product serial number is a date code that specifies the activation date of the product warranty.</p> <p>E. Mounting Holes: Sized for 4-40 diameter panhead screws.</p> |
|---|---|

**Figure 2.1 Model 2823 Wavelength-division Multiplexer**

(Dimensions in parentheses are in millimeters.)

## 2.9 Safety Precautions

The optical emission from the units are laser-based, and may present eye hazards if improperly used. **NEVER USE ANY KIND OF OPTICAL INSTRUMENT TO VIEW THE OPTICAL OUTPUT OF THE UNIT.** As always, be careful when working with optical fibers. Fibers can cause painful injury if they penetrate the skin.

### 2.9.1 Laser Safety Procedures

- 1) **ALWAYS** read the product data sheet and the laser safety label before powering the product. Note the operating wavelength, optical output power, and safety classification.
- 2) If safety goggles or other eye protection are used, be certain that the protection is effective at the wavelength(s) emitted by the device under test **BEFORE** applying power.
- 3) **ALWAYS** connect a fiber to the output of the device **BEFORE** power is applied. Power should never be applied without an attached fiber output. If the device has a connector output, a connector should be attached that is connected to a fiber. This ensures that all light is confined within the fiber waveguide, virtually eliminating all potential hazard.
- 4) **NEVER** look in the end of a fiber to see if light is coming out. **NEVER!** Most fiber optic laser wavelengths (1310 nm and 1550 nm) are totally invisible to the unaided eye and will cause permanent damage. Shorter wavelength lasers (e.g. 780 nm) are visible and are very damaging. Always use instruments, such as an optical power meter, to verify light output.



- 5) **NEVER NEVER NEVER** look into the end of a fiber on a powered device with **ANY** sort of magnifying device. This includes microscopes, eye loupes, and magnifying glasses. This **WILL** cause a permanent, irreversible burn on your retina. Always double check that power is disconnected before using such devices. If possible, completely disconnect the unit from any power source.
- 6) If you have questions about laser safety procedures, please call Force, Incorporated for assistance before powering your product. A Sales Engineer or Applications Engineer may be reached at (540) 382-0462.
- 7) Laser safety classes for the Model 2823 are as follows:

Class	Wavelength Range	Optical Power Accession Limits
IIIb	180 nm to 400 nm	Varies with $\lambda$ and exposure time 0.5 Watt
	400 nm to $10^6$ nm	

**2.10 Shipping and Handling Precautions**

The units are, in general, very rugged and can withstand the stresses of most shipping and handling circumstances. However, the following precautions should be taken:

- 1) When the units are shipped they should be wrapped in a protective material, such as bubble wrap, to protect against excessive jarring and to prevent damage to the external finish of the units. Always use packing material to separate multiple units that are packaged together.
- 2) Care should be taken not to drop or strike the units in any way, especially around the optical connectors.
- 3) The units should never be immersed in liquid.

**2.11 Storing the Unit**

If a unit is to be out of use for an extended period of time, the following steps should be taken to ensure the preservation of the unit:

- 1) The storage temperature range is -40°C to +85°C.
- 2) A low humidity environment is preferable for long term storage.
- 3) All connectors should be covered with active device receptacle caps.



## Section 3 Operating Instructions

### 3.1 Connections and Power-up

- 1) Install the Model 2823 as described in Section 2, page 5 of this document.
- 2) Clean the optical connectors. See Section 3.4 for cleaning instructions.
- 3) Install the links to be multiplexed as described in the installation, operation, and maintenance manual provided with the links.
- 4) Connect the fibers from the WDM to the links. Fiber #1 is always the 1310 nm wavelength. Fiber #2 is the common leg, and fiber #3 is always the 1550 nm wavelength.
- 5) Apply power to the transmitter and receiver. The units are now fully operational. No user adjustment or attention is required.

### 3.2 Performance Verification

No user maintenance is required. The Model 2823 contains no user serviceable parts and requires no routine service. Contact the factory if the unit requires warranty repair work.

### 3.3 Repair Service

For equipment repair or technical assistance, contact Customer Service (800) 732-5252 (USA) or (540) 382-0462. A Returned Material Authorization (RMA) number must be issued by Customer Service before the return of a failed unit. Units should be returned in their original shipping carton, if available. Always include a complete description of the failure or observed anomalies. All units are marked with model number and serial number. This identification sticker is placed on the rear panel or on the product label. The serial number is a date code used as a reference for warranty service.

### 3.4 Cleaning

If the units need to be cleaned, avoid the use of all solvents and use low-pressure clean air to remove loose dirt. Use low-pressure clean air to clear the connectors of any debris. Dirty or scratched connector end faces will greatly reduce the unit's performance. Foam-tipped swabs such as the 2.5mm Mini Foam Swab offered by Fiber Instrument Sales (P/N F1-0005) may be saturated with denatured alcohol\* and inserted into the optical port for cleaning. **DO NOT INSERT A DRY SWAB INTO THE OPTICAL PORT AS THIS MAY DAMAGE THE FIBER END FACE.** Many fiber optic installations experience degraded performance due to dirty optical connector end faces. The following procedure should be used to properly clean the optical connector end faces.

### 3.4.1 Optical Connector Cleaning Equipment

- Kimwipes® or any lens-grade, lint-free tissue. The type sold for eyeglasses work quite well.
- Denatured Alcohol.

#### NOTE

Use only industrial grade 99% pure isopropyl alcohol. Commercially available isopropyl alcohol is for medicinal use and is diluted with water and a light mineral oil. Industrial grade isopropyl alcohol should be used exclusively.

- 30X Microscope.
- Canned Dry Air.

### 3.4.2 Directions for Optical Connector Cleaning

- 1) Fold the tissue twice so it is four layers thick.
- 2) Saturate the tissue with alcohol.
- 3) First clean the sides of the connector ferrule. Place the connector ferrule in the tissue, and apply pressure to the sides of the ferrule. Rotate the ferrule several times to remove all contamination from the ferrule sides.
- 4) Now move to a clean part of the tissue. Be sure it is still saturated with alcohol, and it is still four layers thick. Put the tissue against the end of the connector ferrule. Put your fingernail against the tissue so that it is directly over the ferrule. Now scrape the end of the connector until it squeaks. It will sound like a crystal glass that has been rubbed when it is wet.
- 5) Use the microscope to verify the quality of the cleaning. If it isn't completely clean repeat the steps with a clean tissue.
- 6) Mate the connector immediately! Don't let the connector lie around and collect dust before mating.
- 7) Air can be used to remove lint or loose dust from the port of a transmitter or receiver to be mated with the connector. Never insert any liquid into the ports.

### 3.4.3 Connector Handling


- 1) **NEVER TOUCH THE FIBER END FACE OF THE CONNECTOR.**
- 2) Connectors not in use should be covered over the ferrule by a plastic dust cap. It is important to note that inside of the ferrule dust caps contains a sticky gelatinous residue that is the by-product of the making of the dust cap. This residue will remain on the ferrule end after the cap is removed. Therefore it is critical that the ferrule end be cleaned thoroughly BEFORE it is mated to the intended unit.



### 3.5 Troubleshooting

Common problems include a lack of continuity in the optical fiber, lack of power (or reversed power), or improper input levels. See the installation, operation, and maintenance manual for the video, audio, or data link being multiplexed for additional troubleshooting info.

Problem	Check	Comments
Link signal is weak or noisy.	Check for fiber loss and dirty connectors. Check the WDM fiber assignment.	Verify that the proper power level is being received at the receiver input. Clean the connectors as required, following the instructions in Section 3.4.1, page 10 of this manual. Fibers should be connected as described on the product label.
	Check for proper fiber connector compatibility.	Verify compatibility between the fiber connectors and the link connectors. APC connectors can never be used with PC connectors. IRREVERSIBLE fiber damage and excessively high optical loss can result.
No signal out of the receiver.	Check for fiber loss and dirty connectors. Check the WDM fiber assignment.	Verify that the proper power level is being received at the receiver input. Clean the connectors as required, following the instructions in Section 3.4.1, page 10 of this manual. Fibers should be connected as described on the product label.
	Check the transmitter and receiver power levels.	Proper optical power must be applied for the WDM to work with the transmitter and receiver. See product specifications for the transmitter and receiver to determine proper optical power levels.
	Verify the transmitter signal input.	The transmitter signal input should be at the specifications given for the transmitter in order for the WDM to work.



**Notes:**



# Index

## A

- applications 2
  - bidirectional 2
  - unidirectional 2

## C

- cleaning the optical connector 10
- cleaning the unit 9

## H

- handling precautions 8
- handling the optical connector 10

## I

- installation 5–8
  - connections 6, 9
  - general requirements 5
  - inspection 5
  - items provided 5
  - items required 5
  - mounting holes 7
  - performance verification 9
  - power-up 9
  - rear panel description 7

## L

- laser safety precautions ii, 7

## O

- operating instructions 9–12

## P

- part numbers 3
- performance verification 9
- product overview 1
- product TB 1–3

## R

- repair service 9

## S

- safety precautions 7
  - laser safety ii, 7
- shipping precautions 8
- storage precautions 8



**T**

technical specifications

    environmental 1

    notes 2

    optical 1

    physical 1

technical support. See troubleshooting

troubleshooting 11

    repair services 9

    technical support iii

**W**

warranty iii

    product serial number 7

repair service 9